

How to Thread Juki DDL-8700



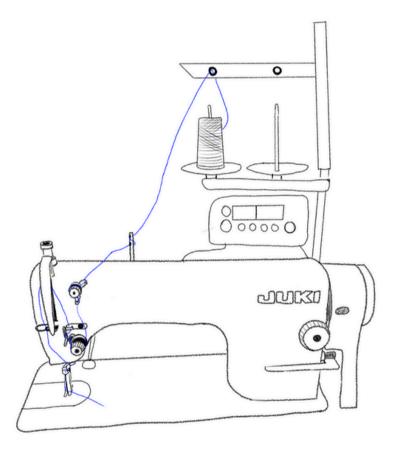


Step 1: Place the Thread Cone

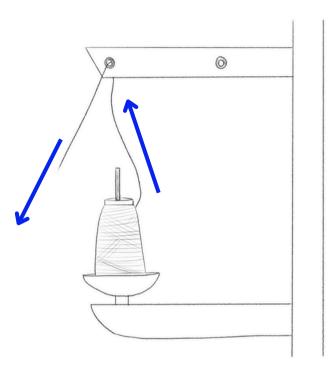

1. Place the thread cone on the preferred thread stand column.

2. Pull the thread from the cone and guide it through the small hole at the top of the thread stand, from **back to front**.

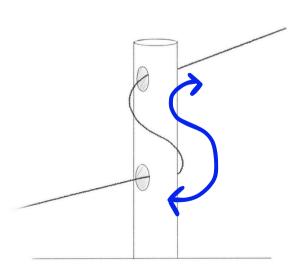

Step 2. Thread the Upper Thread Guide

1. Bring the thread down to the first upper thread guide (near the top of the machine).

2. Create an 'S' shape by threading it through the first hole from right to left, then wrap it around and thread it through the second hole from right to left.


How to Thread Juki DDL-8700

Step 3: Thread the Tension Discs


1. Pull the thread to the two-pronged tension assembly.

2. Thread it through the first hole (A) from **right to left**.

3. Pull the thread **between the two tension discs**, then through the second hole (B) from **front to back**.

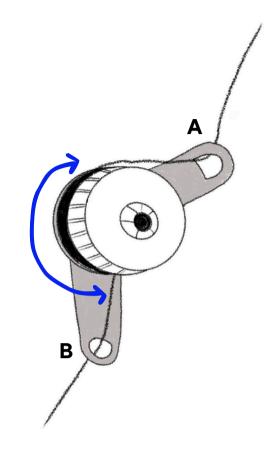

Step 4: Thread the Tension Dial and Guides

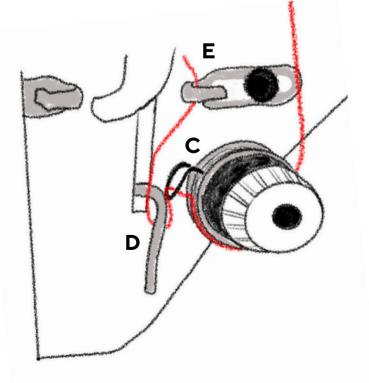

1. Continue by pulling the thread **through the two back tension discs** on the dial.

2. Loop the thread through the **flexible wire hook** (C).

3. Pull the thread under the **metal hook** (D).

4. Bring the thread up and insert it into the **metal loop** (E).

How to Thread Juki DDL-8700

Step 5: Thread the Metal Lever and Hooks

Ε

Η

G

 Pull the thread up to go through the small hole on the metal lever (F) from right to left.
Thread it through another metal loop (G).

Step 6: Finish Threading

1. Hook the thread through the **curvy metal hook** (H).

2. Pull the thread through the small hole in the needle bar from **front to back**.

3. Thread the needle from **left to right**.